



EXPANDA GUN & FOAM CLEANER

READY TO USE CLEANER FOR EXPANDA GUN & UNCURED FOAM

22 September 2014

YOUR SMART ADVANTAGES

- Ready to use
- Fast acting
- Can be used with normal cans using the attachable nozzle provided

USES

- Clean interior and exterior of Expanda Foam Guns
- Clean valves and spray nozzles of manual Expanda Foam aerosol cans
- Remove uncured foam

PRODUCT CHARACTERISTICS*

Colour	Clear
Product code	
500ml aerosol/12 per carton	30605420

DIRECTIONS FOR USE

Read and understand the Material Safety Data Sheet before using this product.

APPLICATION

This cleaner may attack some PVC and coated surfaces. Test in an inconspicuous area first.

Cleaning uncured PU foam

Attached extrusion nozzle onto the valve. Shake the can and spray onto surface to be cleaned. Wipe residue with a clean cloth. Can be used this way to clean the valve and spray nozzle of aerosol foam cans.

Cleaning interior of Expanda Foam Gun

If the gun is to be left unused for a period of time, clean it with Expanda Gun & Foam Cleaner. Ensure can is empty by dispensing into a bin until no more foam is released. Keep the valve opening pointing away from you. Tighten the flow adjustment screw then unscrew the empty can from the gun. Immediately screw on the can of Expanda Gun & Foam Cleaner. Release the flow adjustment screw and pull the gun trigger to fill the gun with cleaner. Leave to stand for 5 minutes to dissolve

buildup in the gun. Pull gun trigger and flush gun until the liquid is clear. Keep the valve opening pointing away from you. Tighten the flow adjustment screw then unscrew the cleaner can from the gun. When re-using gun, flush to remove cleaner residue from gun before starting with filling.

Cleaning exterior of Expanda Foam Gun

Spray adapter and front nozzle of gun thoroughly with Expanda Gun & Foam Cleaner until all fresh foam has been dissolved. Wipe clean using a cloth.

SHELF LIFE

Store between 5 and 25°C, ventilate if above 25°C. Do not store above 35°C. Do not leave in trunk of car, inside car or anywhere in full sunlight or high temperatures, due to the high risk of bursting the can. Do not expose to temperatures exceeding 50°C.

Shelf life is a minimum of 12 months if stored as directed.

DISPOSAL

Do not puncture or burn cans even when empty. Empty containers may be disposed via local landfill.

Dispose of according to local authority regulations. Do not dispose of down drains or into local waterways.

PRECAUTIONS IN USE

Complete details on each of the products mentioned are available on the product Safety Data Sheets. To ensure no harm is caused to persons using Bostik products, it is recommended that all concerned read the appropriate Safety Data Sheets. Visit www.bostik.co.nz for copies.

HIGHLY FLAMMABLE -KEEP AWAY FROM HEAT, SPARKS AND OPEN FLAME

HARMFUL IF INHALED

KEEP OUT OF REACH OF CHILDREN

EXPANDA GUN & FOAM CLEANER

FIRST AID

Call a POISON CENTER or doctor/physician if you feel unwell.

IF INHALED: Remove to fresh air and keep at rest in a position comfortable for breathing

IF ON SKIN: Wash with plenty of soap and water.

IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

IF SWALLOWED: Give water to rinse mouth. Do not induce vomiting. Immediately call a POISON CENTER or doctor/physician

For emergency information contact the National Poisons Information Centre, phone 0800 764 766 (0800 POISON) or CHEMCALL, phone 0800 243 622.

BOSTIK HOTLINE

Smart help 0508 222 777



This datasheet is for the general help of users. It is provided in good faith. The data is current and accurate to the best of our knowledge. Differing materials, substrates, environments, site conditions, and product storage, handling and application may affect results. Users should carry out tests to decide the product's suitability for purpose. This data sheet and the properties of the product may change without notice. Users, suppliers and retailers should check that the data sheets they have are the latest. To the maximum extent permitted by law, Bostik disclaims all warranties in relation to manufacture and use of the product. Bostik is not liable for representations made by users, suppliers or retailers about the product. Bostik is not liable for any loss or damage resulting from incorrect, careless, or negligent use or storage of the product, including use of out of date product. Any liability arising from use of the product is limited to the replacement or purchase price of the product. Bostik does not exclude rights and remedies that cannot be excluded by legislation, for example under the Consumer Guarantees Act 1993. Sale of the product by Bostik is subject to the Bostik New Zealand Limited Conditions and Terms of Sale. For more information on Bostik, products, and conditions of use and sale visit www.bostik.co.nz

Technical Advice

Tel: 0508 222 777

nzsales@bostik.com

Bostik New Zealand Ltd, 19 Eastern Hutt Rd, Wingate, 5019 Lower Hutt, New Zealand. Tel: +64 4 567 5119 www.bostik.co.nz